




KEY CYLINDERS

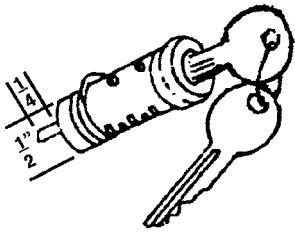


KEY CYLINDER
 PDH 23 1" DOOR
 PDH 24 1 1/8" DOOR
 PDH 128 1 1/4" DOOR

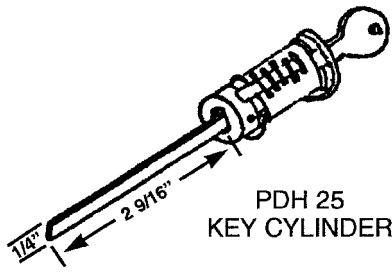


PDH 25
 KEY CYLINDER

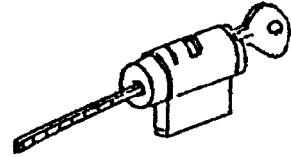


PDH 93
 KEY CYLINDER

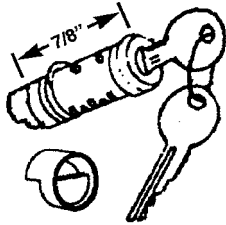


PDH 29
 CROSSLY
 KEY CYLINDER

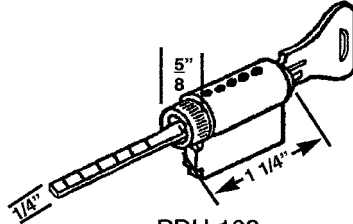


PDH 109
 KEY CYLINDER

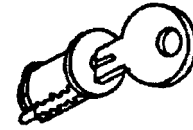


PDH 122
 BRIGG/STRATON
 KEY CYLINDER

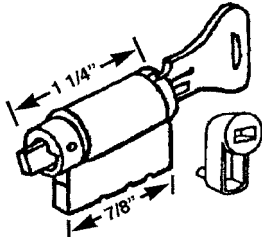

PDH 141
 KEY CYLINDER
 DIE CAST LOCK
 ACTIVATOR

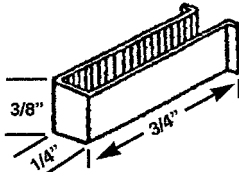


PDH 139
 CLIP

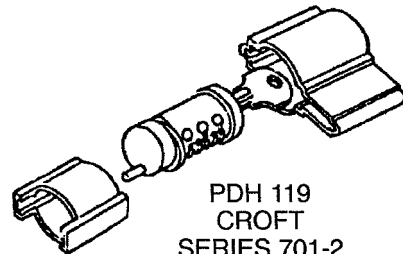

PDH 119
 CROFT
 SERIES 701-2
 KEY CYLINDER



LOCK CYLINDER INSTALLATION (OPTIONAL)

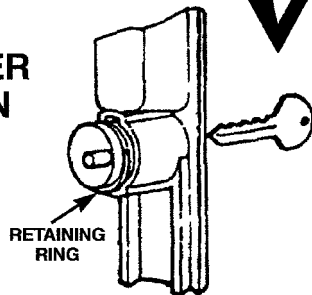

1. Remove knockout plug (if there is one) in outside pull.
2. Turn keyplug into opening in face of outside pull, so that the retaining ring is depressed and the keyplug slips in.
3. Be certain the retaining ring expands in back to permanently fix the keyplug in the pull, and turn freely.
4. Be certain key teeth point up before placing outside pull in rail. (See No. 2 above.)

IF IN DOUBT ON ANY PART -- SEND SAMPLE FOR IDENTIFICATION.
 WE ARE CONSTANTLY ADDING ADDITIONAL ITEMS TO SERVE YOU BETTER.



REPLACEMENT HARDWARE Mfg., Inc.

500 West 84 Street, Hialeah, FL 33014
 (305) 558-5051 • FAX 305-557-5239 • NATIONAL 800-780-5051

5A7
SECTION A
 NEW 7/97